


JAKE Front Axle Stabilizer

The JAKE Front Axle Stabilizer allows to lock front axle movements (oscillation and suspension) in any position the axle happens to be when turning the Stabilizer on and thereby significantly increasing stability of the tractor. The Stabilizer is activated automatically by an electric handbrake or manually by an on-off switch.

There are two basic models of the Stabilizer; JAKE STD Front Axle Stabilizer

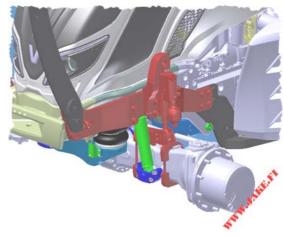

for the axle with only oscillation and JAKE SPN Front Axle Stabilizer for the axle with both oscillation and suspension. Both models have own versions for a front loader tractor and for a front linkage tractor.







